


STEP 1



Align vinyl to surface and add tape to the center of each edge, creating a hinge.

STEP 2

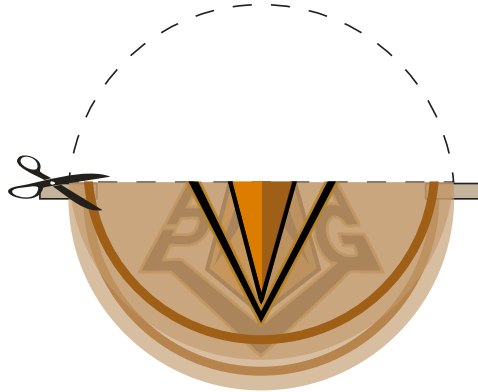

Peel top down separating it from the backer, then cut backer off.

STEP 3




Apply exposed vinyl to surface.

STEP 4



Remove tape.

STEP 5

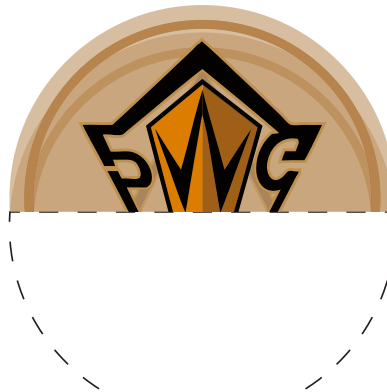


Repeat steps 1 & 2 for the bottom.

STEP 6



Now all the vinyl should be applied to your surface with the pre-mask still in-tact.

STEP 7

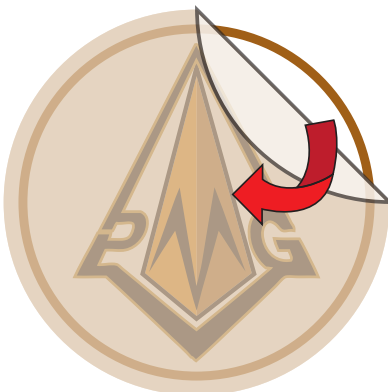

You are now ready to remove and peel off the pre-mask.

STEP 8



Finish product.